

Factory resetting the Wireless Room Thermostat


When to factory reset a Wireless Room Thermostat

You may need to reset a Wireless Room Thermostat if you are swapping which Genius Hub the Wireless Room Thermostat is included onto or if it has stopped communicating with the Genius Hub and re-including it does not work.


How to factory reset the Wireless Room Thermostat

To factory reset a Wireless Room Thermostat:

- Remove the Wireless Room Thermostat from the wall by loosening the 2 screws on the underside of the Wireless Room Thermostat. This requires a flat bladed screwdriver.

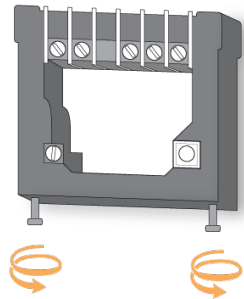


- On the back of the Wireless Room Thermostat behind the wall mounting plate, there is a row of 8 white DIP switches.
 - Put switch 1 (the left most switch), to the UP (on) position.

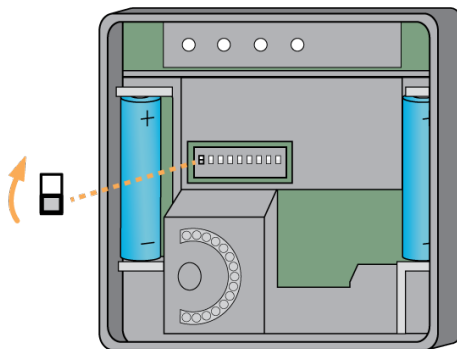


- Turn over the Wireless Room Thermostat and rotate the dial on the front of the Wireless Room Thermostat, until 'P' is displayed on the LCD screen.

- Press the dial twice in succession.

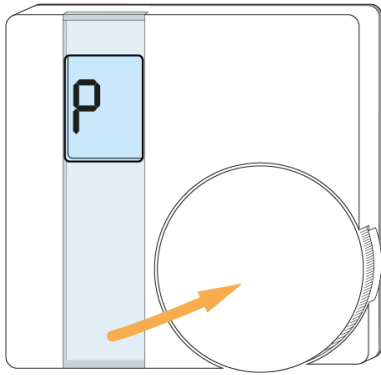

- The LCD screen will read 'PP'.

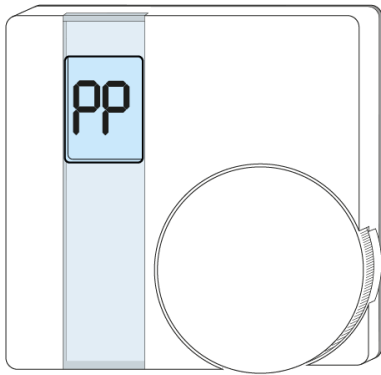

How to add the Wireless Room Thermostat to a Genius Hub

The Wireless Room Thermostat is now in a factory reset to default state, to add it back onto the system again go to the 'Doctor' on the app which is under the 'Main Menu'.

For more information see [this article](#).

Related Information:

- [Transferring Devices over to a new Genius Hub](#)
- [Factory resetting an Electric Switch](#)
- [Adjustments you can make with our Genius Hub Devices to fine tune your setup](#)
- [Adding A New Genius Radiator Valve](#)
- [14. Adding new devices](#)