


# Controlling the Single Channel Receiver with the Genius Hub powered off

If your Genius Hub is powered off, here is how to manually override the boiler controller, in order to operate your heating.

You can do this if you want to 'manually' override the heating without the app, or the Genius Hub is powered off, or not communicating.


To turn Central Heating **ON**:

Press the 'On' button, the light will turn green and the boiler should run.

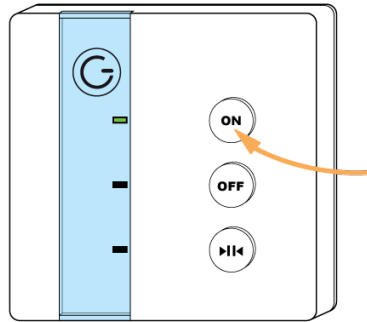

To turn Central Heating **OFF**:

Press the 'Off' button, the light will turn red and the boiler should stop.

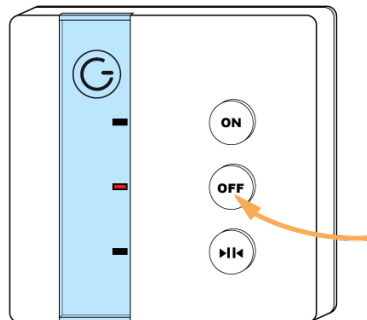

Manually override the boiler or zone valve with the 'Single Channel Receiver'

## Related Information:

- [Technical Documents](#)
- [Controlling a Plinth Heater](#)
- [8. Override Mode](#)
- [5. Installing the Underfloor Receiver Units](#)
- [3. Installing the boiler Receiver Units](#)