


Genius Hub Installer Training - Step 4: Thermostat

Step 4: Install the Thermostat


The thermostat provides you with an easy way to see the temperature in the room as well as a quick way of overriding the temperature without loading the app.



1. First, remove the Room Thermostat from its backplate using a flat bladed screwdriver and placing this in the cutout in the underside of the device, before levering the front away.

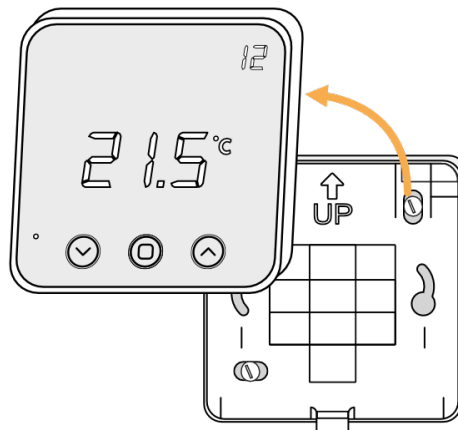

2. Turn the Room Thermostat over, so the screen is facing away from you and pull out the plastic tab to connect the battery.

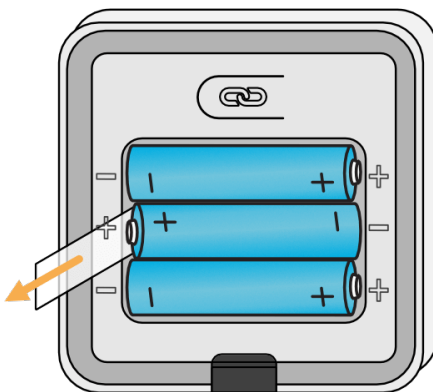

3. Affix the backplate to the wall, with the up arrow at the top.



The golden rules for positioning a Room Thermostat are:

Internal Wall - To stop the Room Thermostat from under reading from being on a cold surface.

Out of Direct Sunlight - Consider if the sun was shining through the window would the Room Thermostat be in direct sunlight therefore affecting the temperature it reports.

Chest Height - Position 1.5m from the ground to give the best view and accurate temperature (not the ceiling temperature).

4. First screw the backplate to the wall in the chosen room. Then fit the Room Thermostat onto the backplate by aligning it at the top and rotating it down to meet at the bottom.

