

# Factory resetting the Genius Room Thermostat


## When to factory reset a Genius Room Thermostat

You may need to reset a Genius Room Thermostat if you are swapping which Genius Hub the Genius Room Thermostat is included onto.


## How to factory reset the Genius Room Thermostat

To factory reset a Genius Room Thermostat:

- Remove the Genius Room Thermostat from the wall by sliding it up against the back plate.

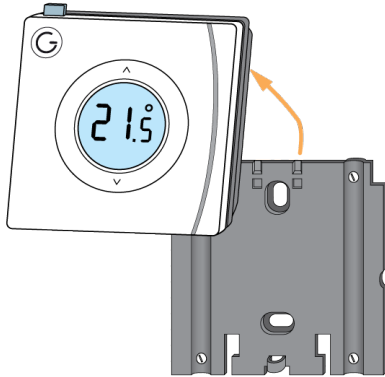

- Turn the device over, so you are looking at the back and remove one of the batteries.

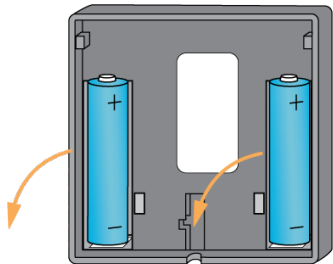

- Press and hold the top button and while doing so, re-insert the removed battery until the LED flashes red or comes on continuously (approx. 5 seconds). As you holding down the top button, all of the icons will appear on the screen briefly, before disappearing leaving only the backlight. Keep your finger on the button for a further 5 seconds.
- Release the top button and the measured temperature should appear.
- Remove one of the batteries, wait 10 seconds and refit the battery.
- If you have successfully factory reset the thermostat, then when you press and release the top right LED button it will flash green quickly with an antenna flashing.

## How to add the Genius Room Thermostat to a Genius Hub

The Genius Room Thermostat is now in a factory reset to default state, to add it back onto the system again go to the 'Doctor' on the app which is under the 'Main Menu'.

For more information see [this article](#).

## Related Information:

- [Transferring Devices over to a new Genius Hub](#)
- [Factory resetting an Electric Switch](#)
- [Adjustments you can make with our Genius Hub Devices to fine tune your setup](#)

- [Adding A New Genius Radiator Valve](#)
- [14. Adding new devices](#)