


# Changing Flat Batteries In The Genius Room Thermostat (HI-WRT-D)

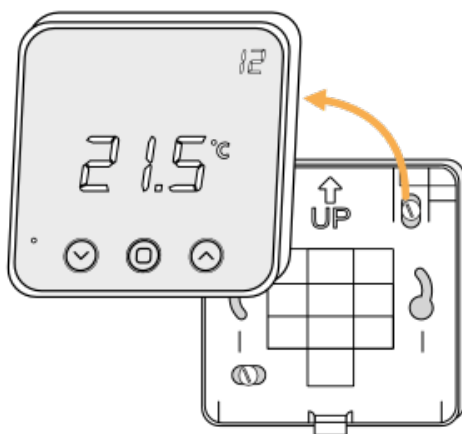


The batteries are flat in the Genius Room Thermostat and the Thermostat will have stopped working altogether.

First, remove the Room Thermostat from its backplate using a flat bladed screwdriver and placing this in the cutout in the underside of the device, before levering the front away.




Remove the 3 x AA batteries, (note the orientation of the batteries, which is also indicated on to the side of the battery compartment).

Wait 30 seconds before putting in the new batteries.

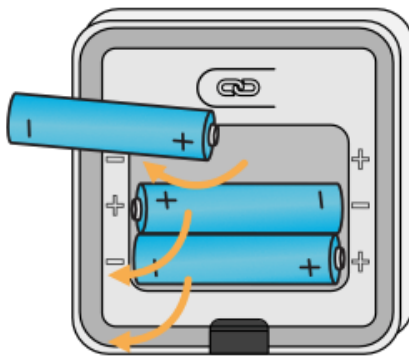

Put in the 3 x new AA batteries.

Rechargeable batteries should not be used as their voltage is too low (1.2v not 1.5v).

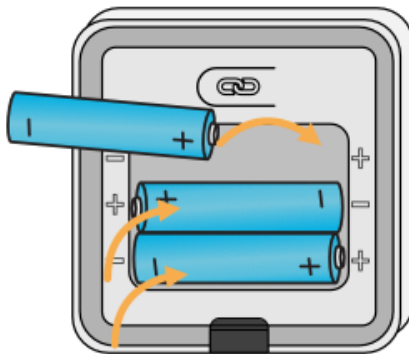

Select the Room Thermostat with the flat battery

The old number for the Room Thermostat may be on the side of the device.

Your system will take around a day to update with your devices values and for any errors to clear.

Wake up the device by pressing the middle button once.



The Genius Hub will check the battery level to ensure that the new battery level has been reported by the device.

Fit the Room Thermostat onto the backplate by aligning it at the top and rotating it down to meet at the bottom.

