## **Doctor - Wireless Room Thermostat**

- Re-adding A Wireless Room Thermostat (HO-WRT-B)
- Re-adding A Genius Room Thermostat (HI-WRT-D)
- Re-adding A Genius Room Thermostat (DA-WRT-C)
  Adding A New Genius Room Thermostat (HI-WPT-D)
- Adding A New Genius Room Thermostat (HI-WRT-D)
- Reconfiguring a Genius Room Thermostat (HI-WRT-D)
  Changing Low Patterios In The Capital Room Thermostat
- Changing Low Batteries In The Genius Room Thermostat (HI-WRT-D)
  Changing Flat Batteries In The Genius Room Thermostat (HI-WRT-D)
- Fixing the communication to a Genius Room Thermostat (HI-WRT-D)
- Batteries have leaked in the Room Thermostat (DA-WRT-C)
- Batteries have leaked in the Room Thermostat (HO-WRT-B)
- Changing Low Batteries In The Genius Room Thermostat (DA-WRT-C)
- Changing Flat Batteries In The Genius Room Thermostat (DA-WRT-C)
- Reconfiguring a Genius Room Thermostat
- Reconfiguring a Genius Room Thermostat (HO-WRT-B)
- Removing a Dead Genius Room Thermostat
- Fixing the communication to a Genius Room Thermostat
- Fixing the communication to a Genius Room Thermostat (HO-WRT-B)
- Adding A New Genius Room Thermostat
- Changing Flat Batteries In The Wireless Room Thermostat (HO-WRT-B)
- Changing Low Batteries In The Wireless Room Thermostat (HO-WRT-B)
- Adding A New Wireless Room Thermostat (HO-WRT-B)
- · Adjustments you can make with our Genius Hub Devices to fine tune your setup
- 4. Installing the Wireless Thermostats
- How Temperature Hierarchy works
- Differences between the Genius Smart Plug